

LEMONAID UPCYCLING - DIY SPICE RACK

DURATION: 30 MIN · DEGREE OF DIFFICULTY: EASY



1. Start with the driftwood and the forstner drill (30 mm).



2. Drill 6 holes next to each other into the wood.



7. Fix the screw eyes at the two ends of the wood.




8. Attach the string to the screw eyes.



Equipment


- 1 piece of driftwood
- Forstner drill (30 mm)
- 6 Lemonaid bottles and screw caps
- 6 Screws
- 6 Washers
- Drilling machine
- String
- 2 Screw eyes

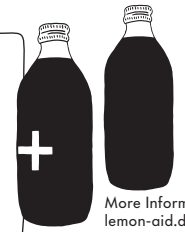

More Information:
lemon-aid.de/diy




3. Take the screw caps, screws and washers.

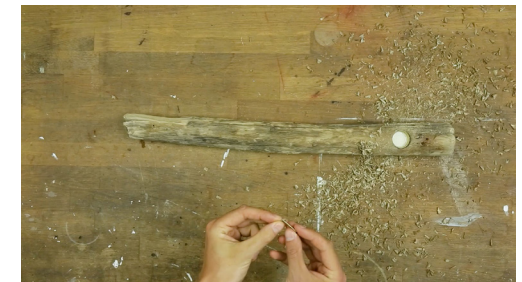

4. Put the washers onto the screws



5. Fix the screw caps with screws into the holes.

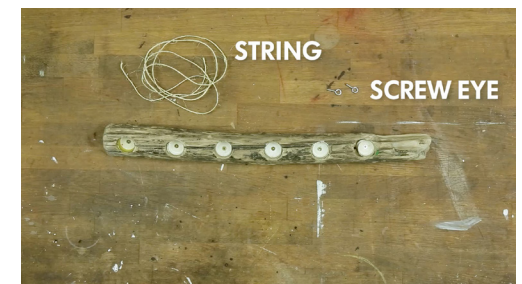

6. Now take the string and the two screw eyes.



9. Fill the bottles with spices and screw them into the screw caps.



10. Done!